



- 1 Set thermostat to "OFF" position.  
Remove front panel.

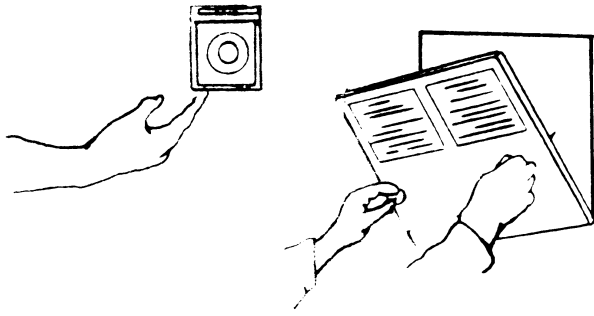


- 2 Turn gas valve knob to "OFF" position.  
Wait 5 minutes.

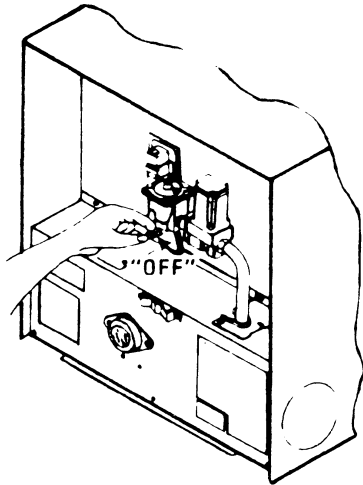


- 3 Turn gas valve knob to full "ON" position. Correct operation of the unit depends on this valve being in the full "ON" position. Never attempt to operate the unit with valve partially closed.

Set thermostat at desired temperature.  
Furnace will now operate automatically.

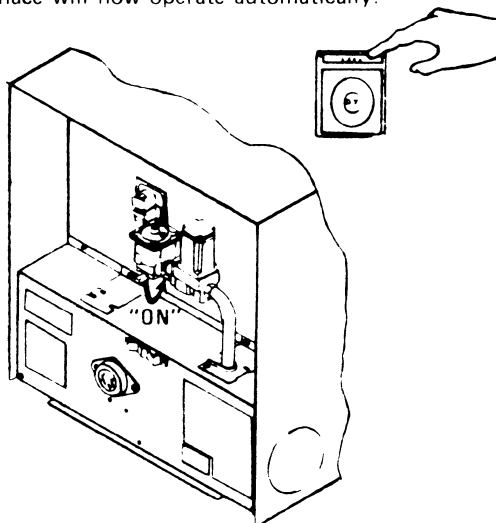


- 4 Allow 5 to 8 seconds for burners to ignite.

- 5 If burners do not light, set thermostat on "OFF" position. Wait 5 seconds, then re-set thermostat to "ON" position.

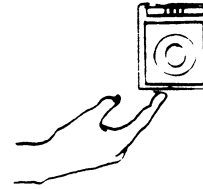

- 6 If ignition is not obtained after three tries, go to complete shut-down and determine cause.

- 7 Replace furnace front panel when ignition is obtained.

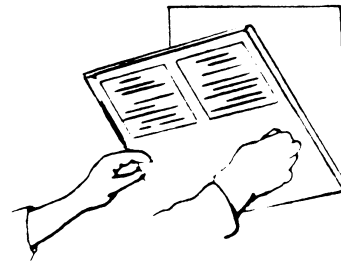

- 8 FOR COMPLETE SHUT-DOWN, TURN GAS VALVE KNOB TO "OFF". SET THERMOSTAT TO "OFF" SETTING.

