




Atwood Mobile Products
4750 Hiawatha Drive • Rockford, IL 61103-1298
PHONE: 815-877-5700 FAX: 815-877-7469
INTERNET: <http://www.atwoodmobile.com>

LITERATURE # MPD 85341

5TH WHEEL LANDING LEG STANDARD DUTY BEVEL GEAR & BEARING KIT

Effective 6/4/03

Use on Atwood 5th Wheel Standard Duty landing leg ONLY.

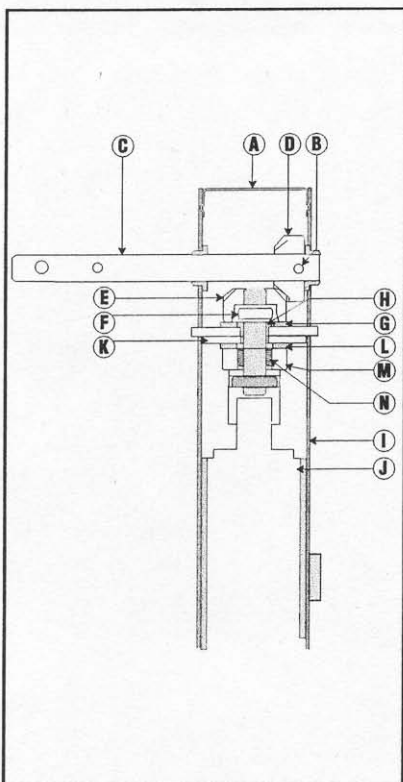

For complete 5th Wheel Landing Leg instructions, consult MPD 71125.

KIT MPD 75030

Remove 5th Wheel Landing Leg per instruction manual MPD 71125 and camper manufacturer instructions.

1. Remove Jack Cover (A).
2. Punch out Drive Pin (B).
3. Remove Drive Shaft (C), Bevel Gears (D) & (E), Machine Pin (F), Spacer Washer (G) and Nylon Brushing (H).
4. Lift Outer Housing (I) from Inner Ram (J).
5. From the top of the Inner Ram, remove Spreader Washer (K), Spacer Washer (L), Thrust Bearing (M) and Felt Sleeve (N).
6. Reassemble jack with the new components (B,D-H, K-N) following steps opposite to the disassembly steps.

Install 5th Wheel Landing Leg per Instruction Manual MPD 71125 and camper manufacturer instructions.

Aftermarket Replacement Service Part

Quarter page actual size
(Shown enlarged)