




**A Division of Dura Automotive Systems**  
1120 North Main Street • Elkhart, IN 46514  
**PHONE:** 574-264-2131 **FAX:** 574-262-2550  
**INTERNET:** <http://www.atwoodmobile.com>

**LITERATURE NUMBER MPD 93219**

## **THERMOSTAT REPLACEMENT**

**Spark Ignition Models**

Effective 10/6/04

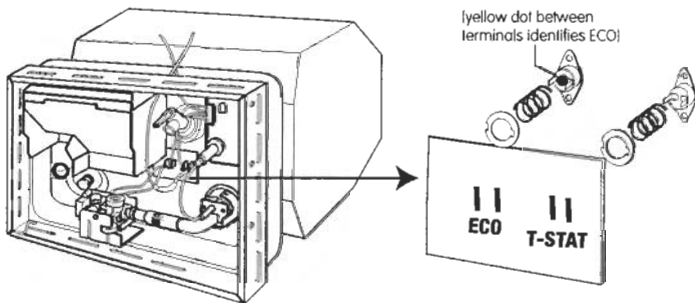

For complete water heater instructions consult MPD - 93755, 93756, 93758.

### **REMOVAL PROCEDURES**

#### **Front Mount:**



### **CAUTION ELECTRICAL DAMAGE**

- Label all wires before disconnecting when servicing.
- Verify proper operation after servicing.

1. Turn switch to OFF position
2. Disconnect brown and red wires from thermostat and ECO terminal connections on front of water heater.
3. Peel off black foam cover.
4. Remove washer, spring and thermostat from behind metal tabs on water heater combustion pan.

### **INSTALLATION PROCEDURES**

#### **Front Mount:**

1. Place thermostat (140°) in the right cutout (as you face the water heater).
2. Replace spring and washer behind metal tabs on water heater combustion pan to hold thermostat against water heater tank.
3. Cover with black foam cover (provided with kit).
4. Reconnect brown wires to thermostat and red wires to ECO.
5. Turn unit on.