2 possible reset procedures are available for the 628661-power board (Depending upon the refrigerator model)


"Hard Lockout" Reset Procedure 1: Done via the front panel display

(Can be done on all models except the N811/611 models)

Entering the diagnostic mode of operation and then <u>clearing fault history screen 6</u> resets the no cool "hard lockout" condition. This procedure can be found in the Service Manual.

## "Hard Lockout" Reset Procedure 2: Done via the power board

(Can be done on all models)

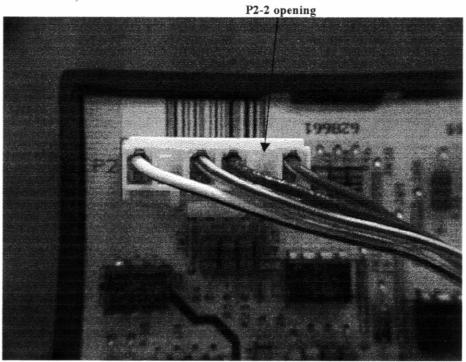

With the refrigerator powered ON and operating in the Manual AC Mode (AC power cord disconnected from the power board);

- 1. Insert one end of a piece of multi stranded wire (10 gauge works well) whose insulation is stripped ½" on both ends, into the P2-2 opening and hold into place.
- Place the other end of the multi stranded wire to ground (metal back panel) and hold it in place for a minimum of 10 seconds.